

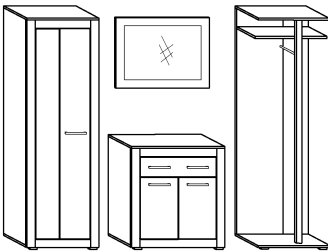







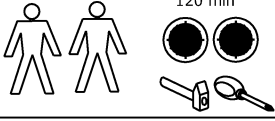


		NERON → 200 ↑ 198 ↘ 38					
x 29  (a)	x 33  (b)	x 4  (c)	x 37  (d)	x 18  (e)	x 10  (f)		
x 10  (g)	x 4  (h)	x 11  (i)	x 5  (j)	x 1 kpl.  (l)	x 2  (o)	x 2  (p)	x 24 (4x20)  (u)
x 4 (3,5x30)  (w)	x 60 (3,5x16)  (x)	x 8 (3x12)  (y)	x 140  (z)	x 2  (q)	x 1  (v)	x 1  (ó)	x 1  (r)
x 1 kpl. (300 mm)  (k)	x 1 (260 mm)  (m)	x 1 (280 mm)  (n)	x 1 (300 mm)  (r)	x 12  (s)	x 1 (1928 mm)  (t)	120 min 	


1 - FAZY MONTAŻU
A - OZNACZENIE ELEMENTÓW
a - OZNACZENIE AKCESORIÓW

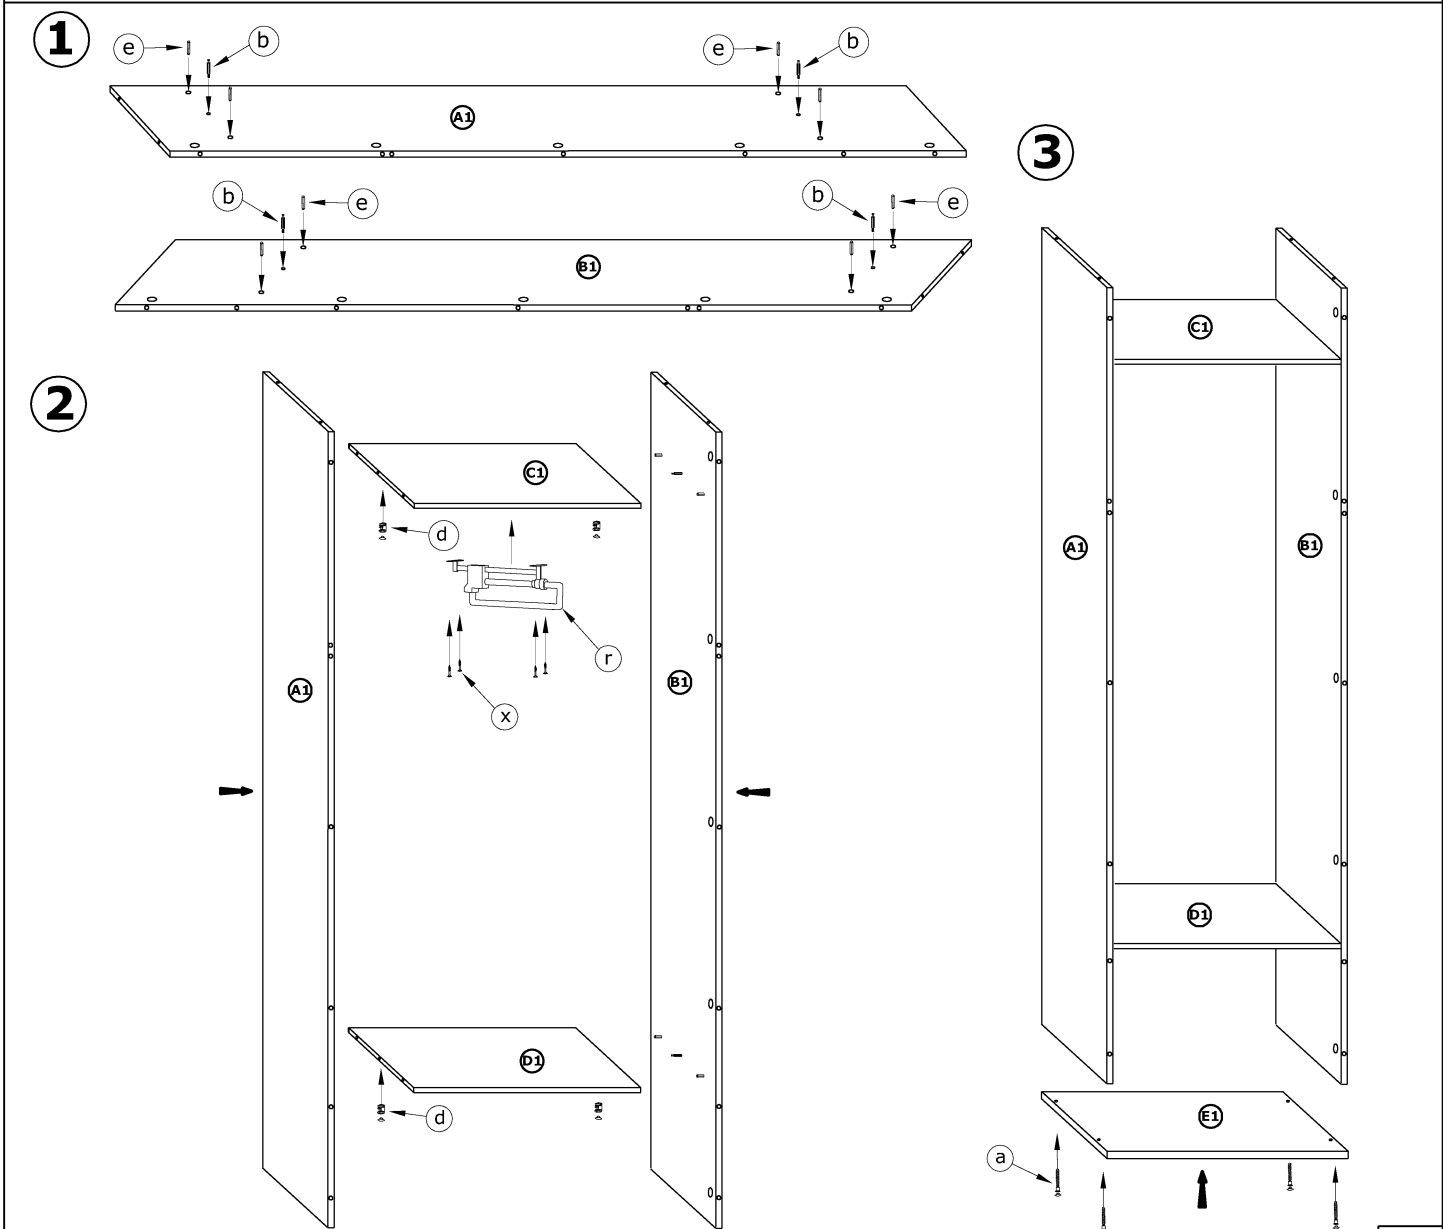


4

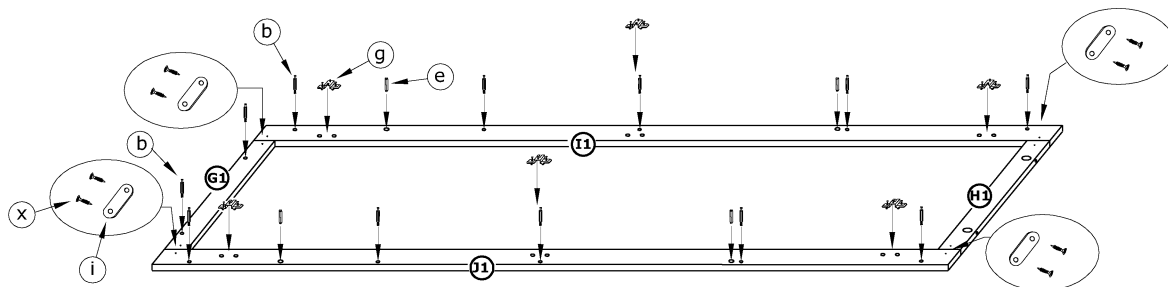


5

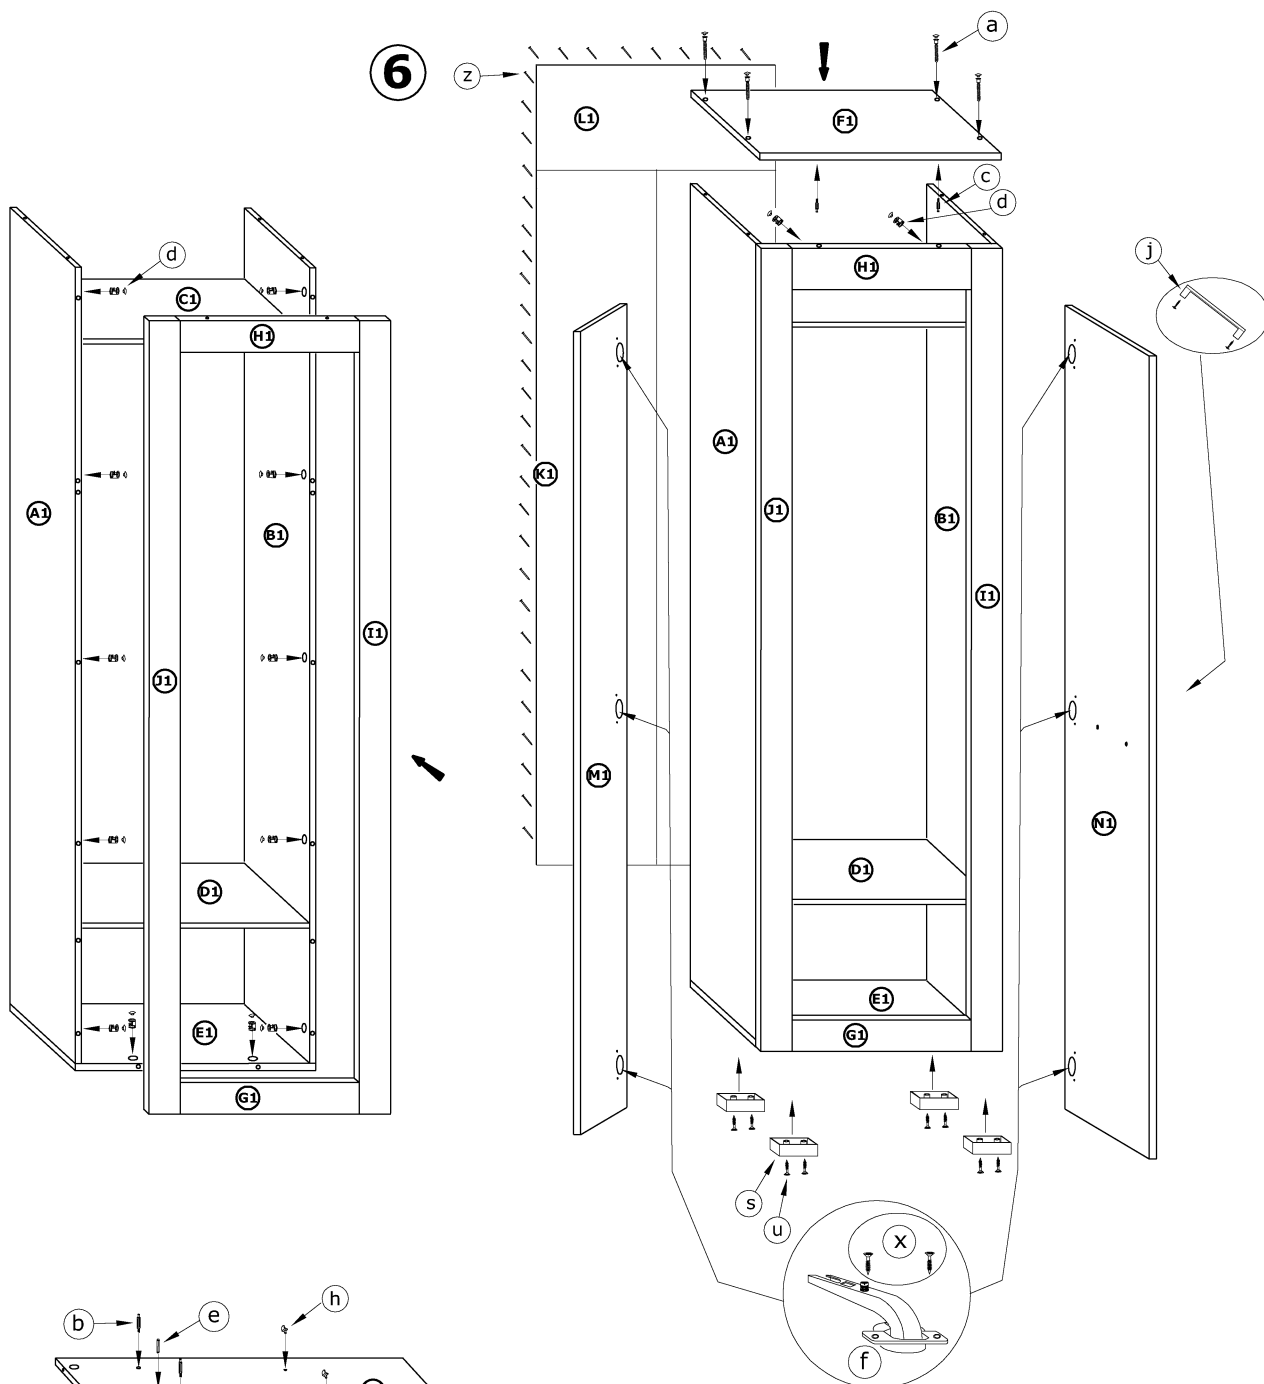


7

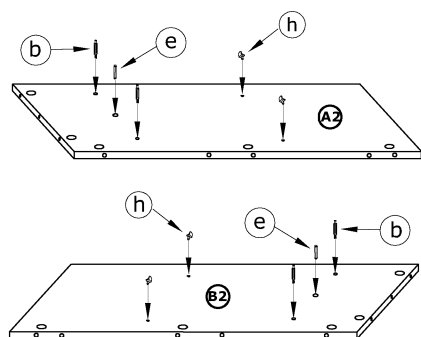


8

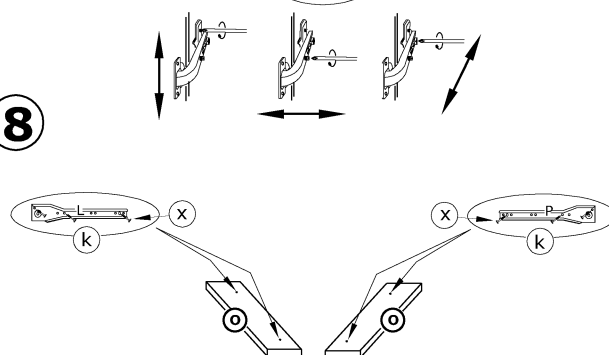


9

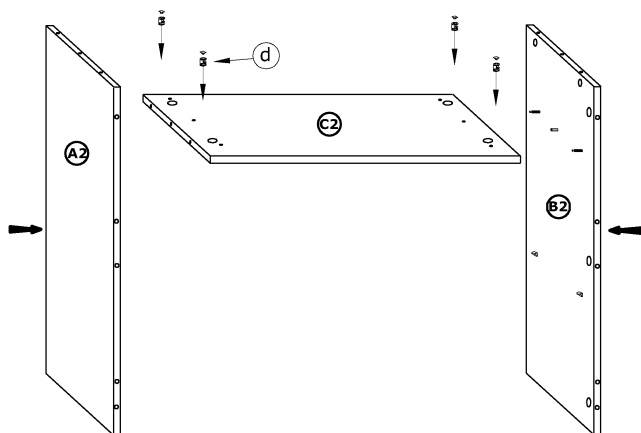


10

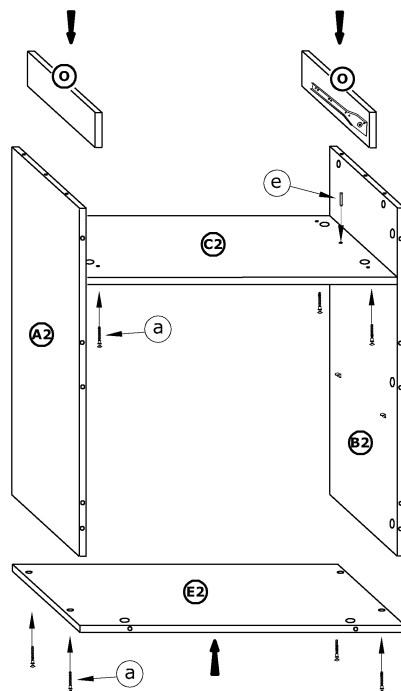


11

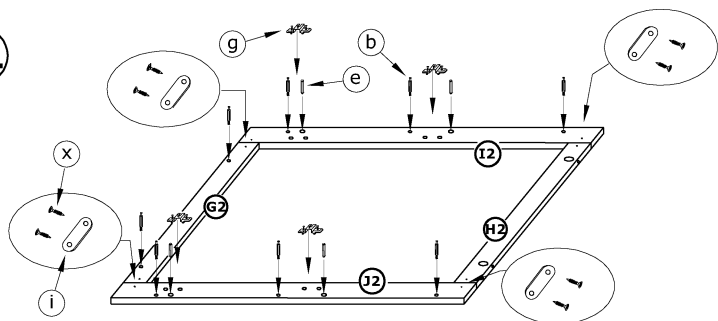


12

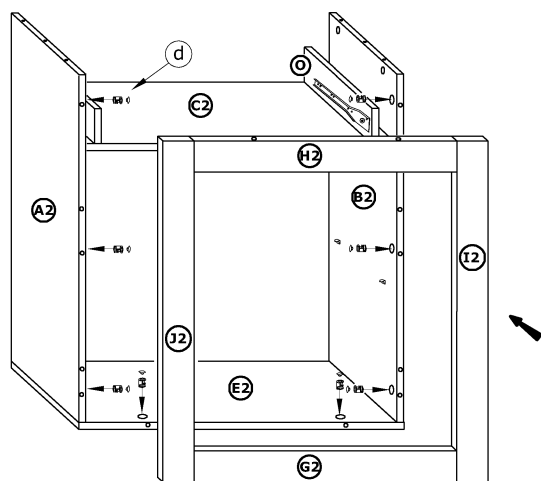



13

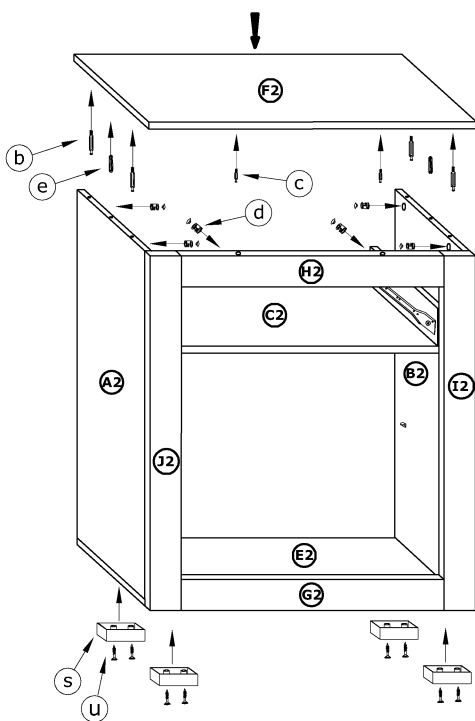


15

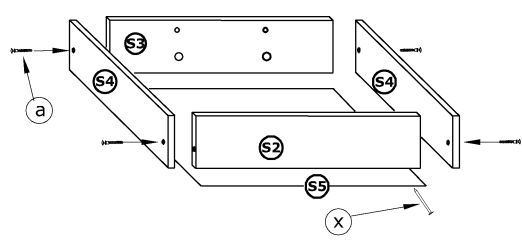


14

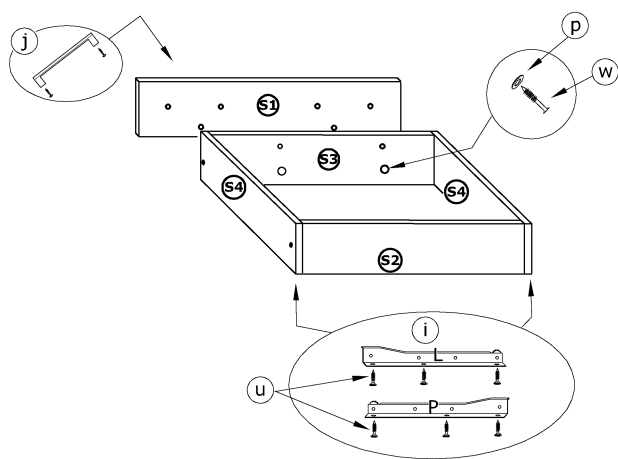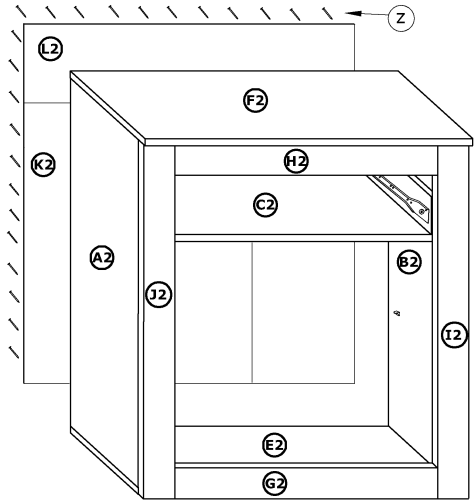

16

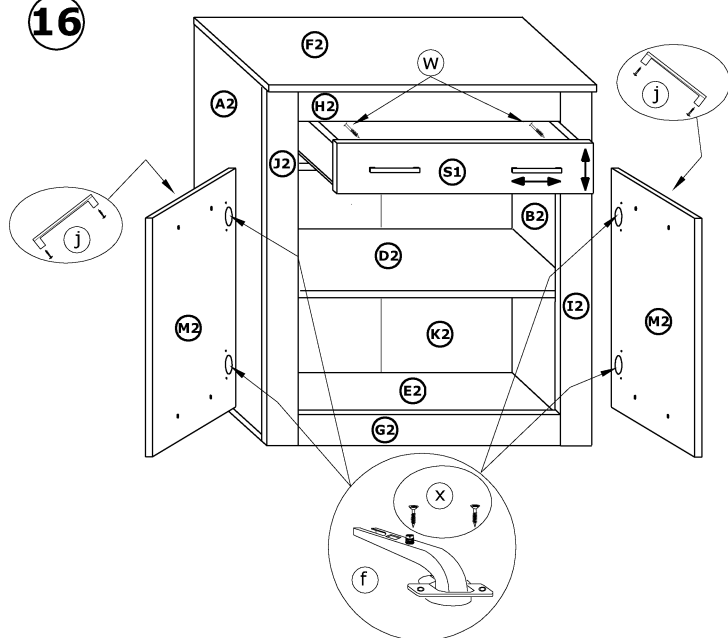

17

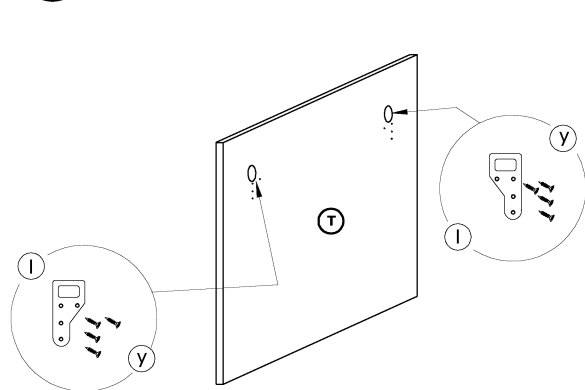

18

