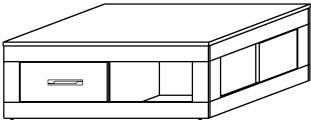



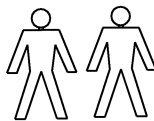



		VRN-02 VERIN - ŁAWA → 90 ↑ 34 ↘ 94				
x 19  (a)	x 36  (b)	x 36  (c)	x 12  (d)	x 2  (e)		
x 4  (g)	x 8  (h)	x 4  (i)	x 40 (3,5x16)  (j)	x 8 (3,5x30)  (k)	x 20  (l)	x 1  (m)
x 2 kpl. (400 mm)  (f)						45 min 

1 - FAZY MONTAŻU


A - OZNACZENIE ELEMENTÓW

a - OZNACZENIE AKCESORIÓW


1

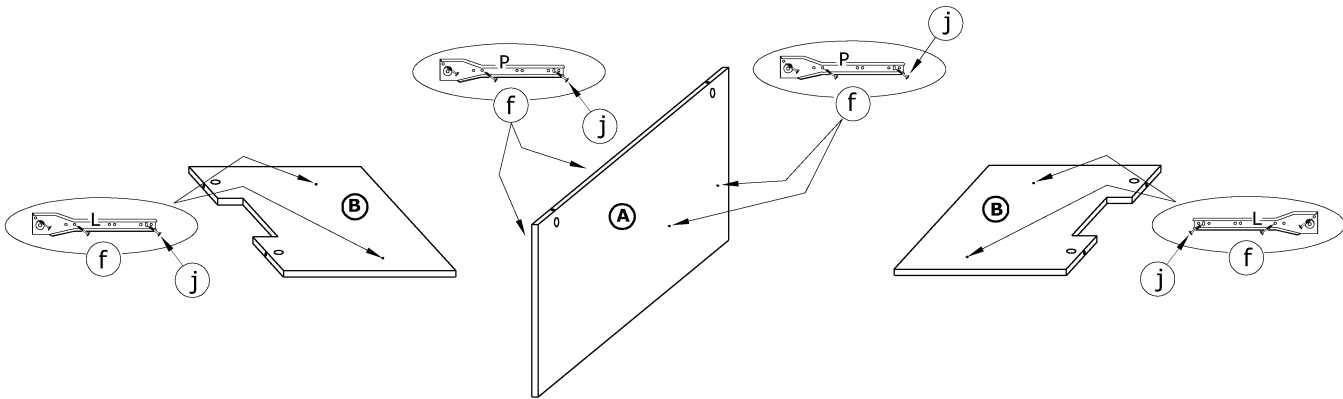


2

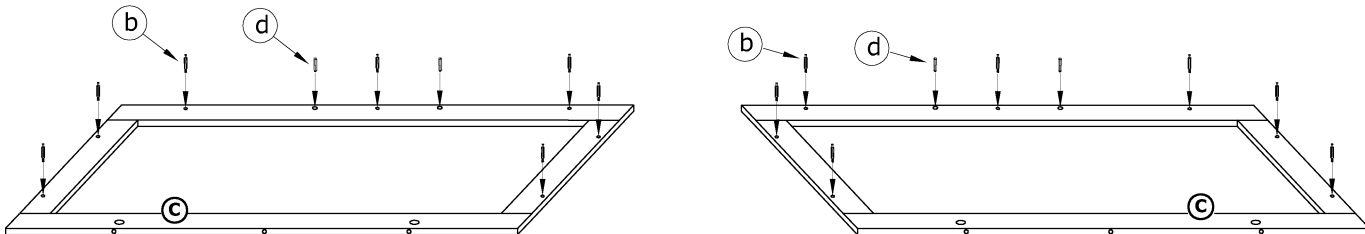


3

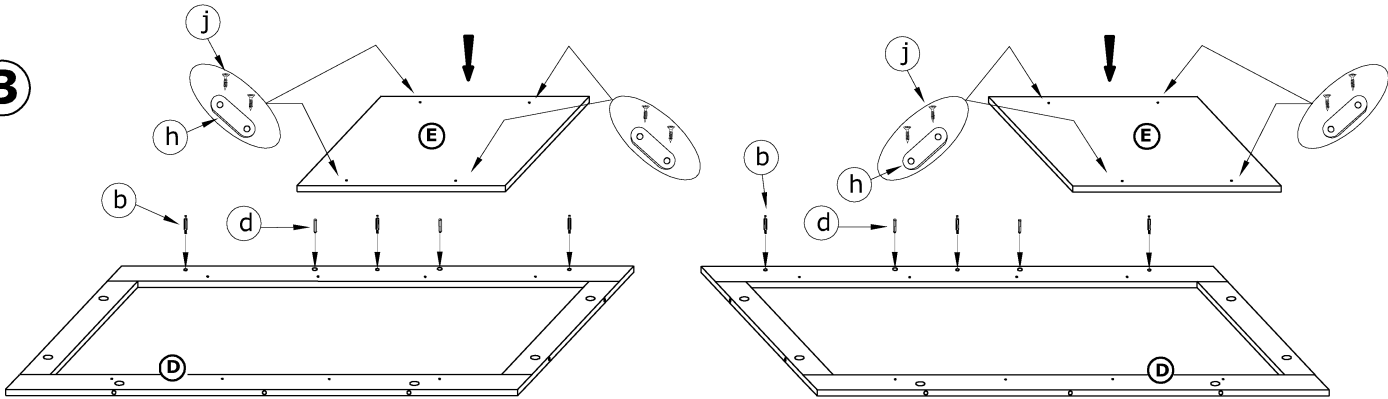


4

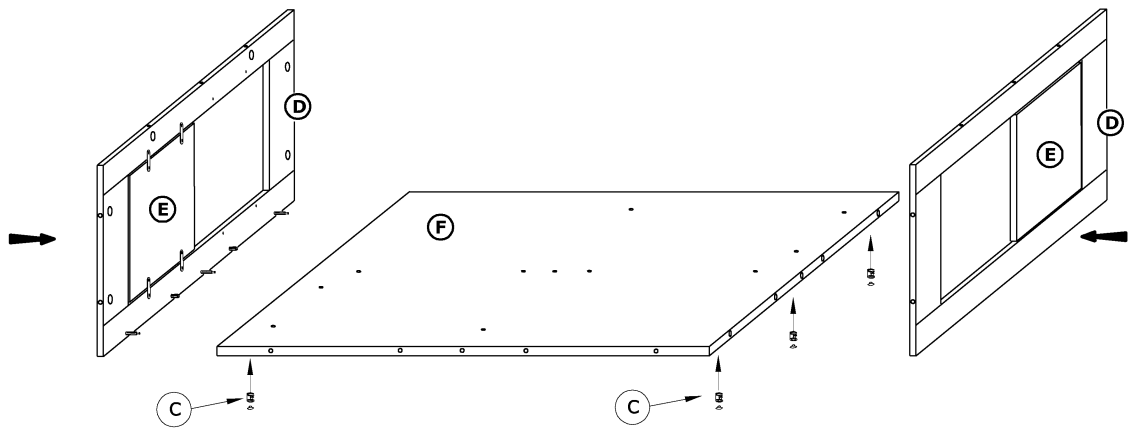


5

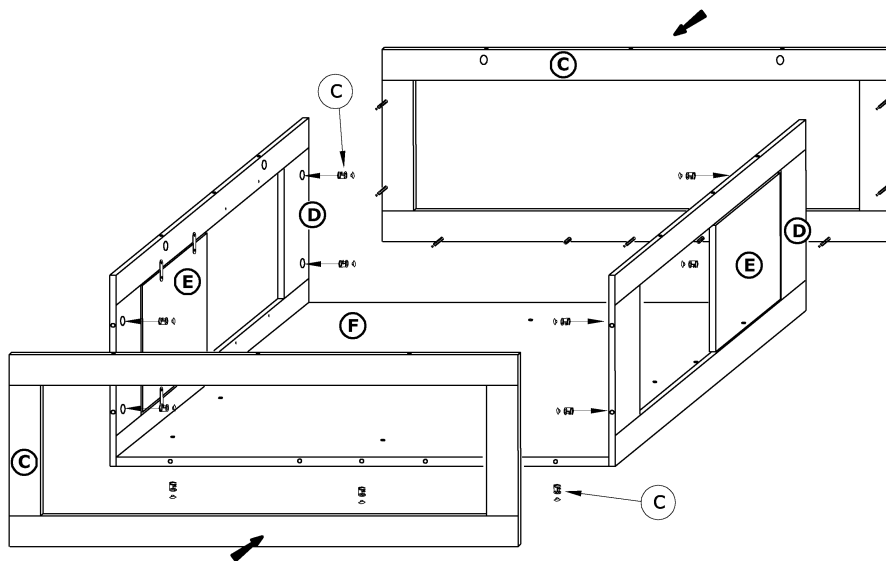


6

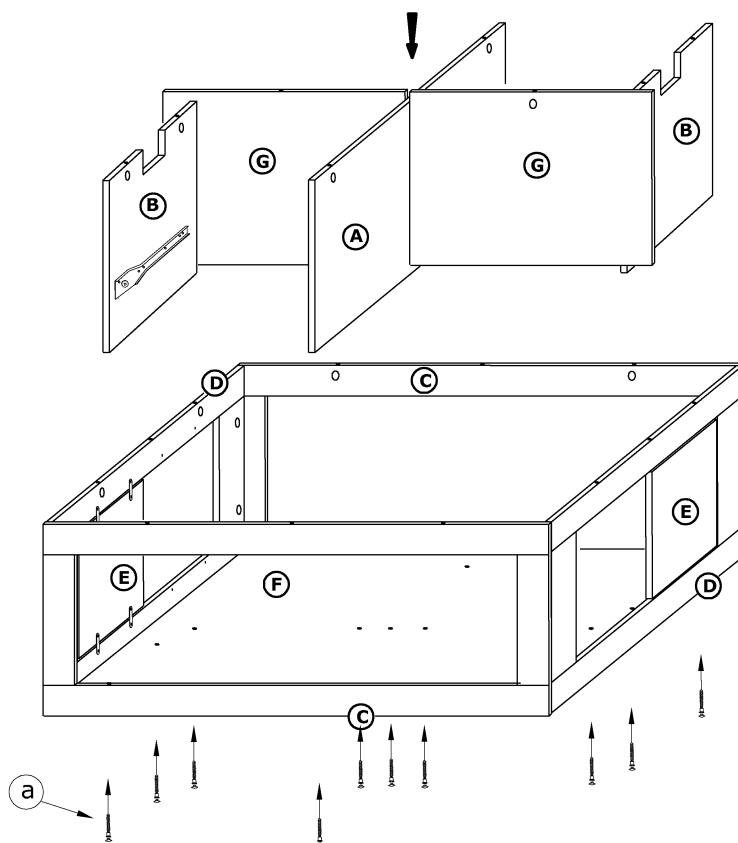

7

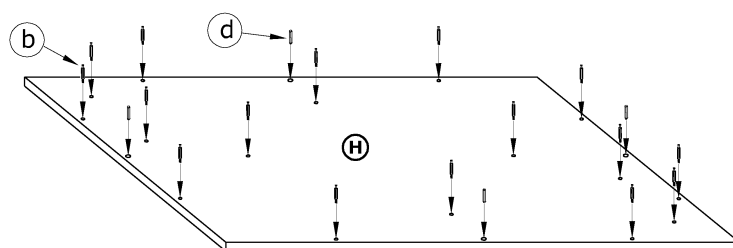


8

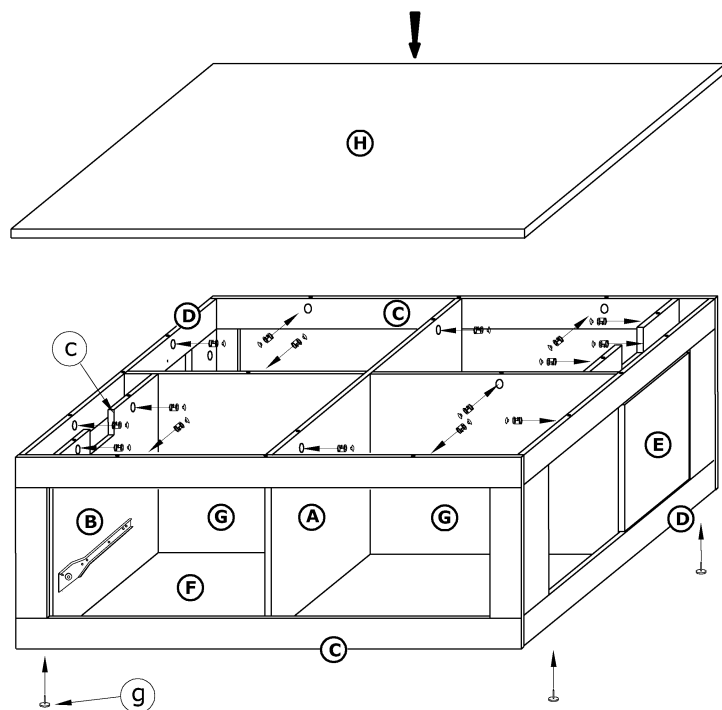


9

X 2

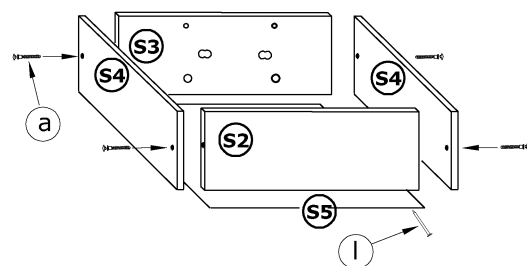

10

X 2

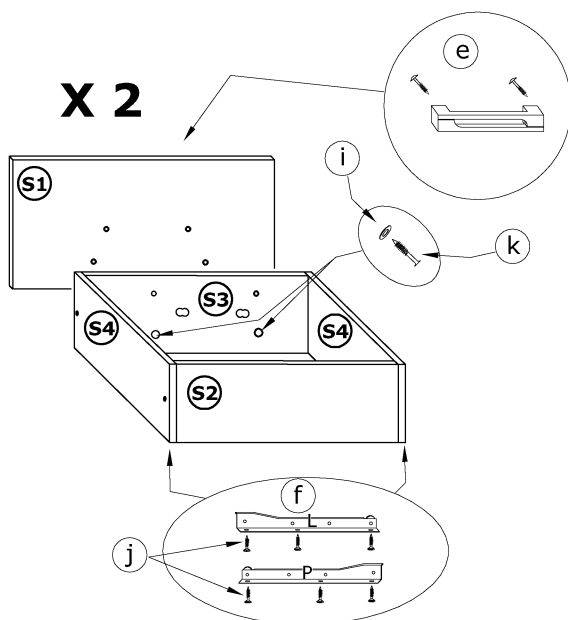

11

